


## Q: The LCD is blank with No display

A: The logger default is in sleep mode, so it won't display when it stops logging. Go to Logger Setting page and switch to non-sleep mode if you want it to display the current temperature or humidity.

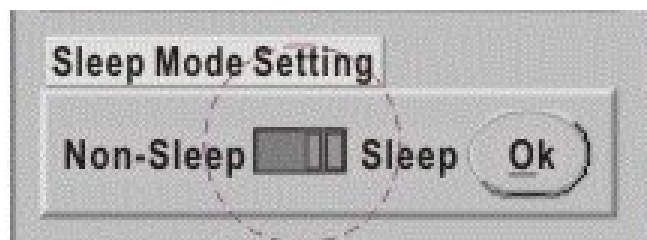

If your logger is with on/off button, check if the LCD was turn off.

