



AZ Instrument Corp.

Web site: <http://www.az-instrument.com.tw>
E-mail: info@az-instrument.com.tw

Tel: 886-4-25326668 (rep.)
Fax: 886-4-25326593

Edit by Naima 29th Oct. 2020

Why I need to configure BLE logger everytime before re-start the logger?

When logger re-start, the previous recorded data will be re-write.

To configure the logger again is to remind user that they need to readout the recorded data first before next start.