


Edit by Naima 16 Nov. 2023

Question

How can I tell my single use logger's current status?

Reply:

You can tell the status by the LED as marked at below image and below chart:

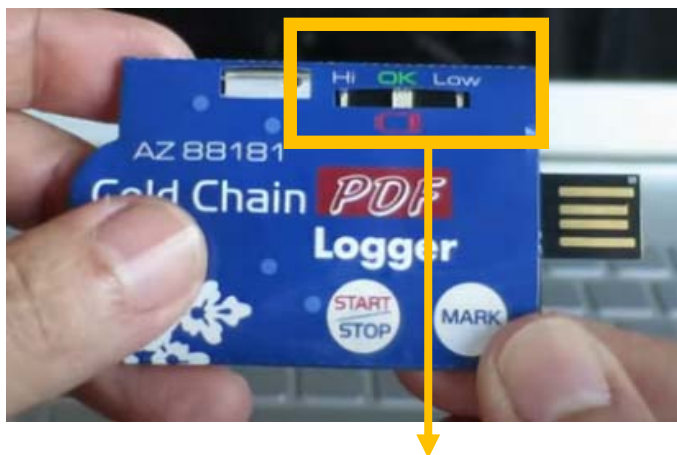

LED	After programmed	Activated	Mark	Low/High	Low. Bat. Symbol
Red LED	N/A	Flash three runs after start logging	Flash one run after press mark	Blinks when the measuring set limit value is exceeded.	Blinks every 2 seconds when battery is too low
Green LED	Blink triple every 5 seconds	Blink once every 2 seconds.	N/A	N/A	N/A